

These Design Instructions will help you create Template photos for your Custom Tech Insert, which you will need to attach to your order during checkout. For more information, first visit our FAQ's page.

You can also refer to the instruction videos for each Step here:



FOLLOW ALL OF THE BELOW INSTRUCTIONS CAREFULLY.

For best results, read through the instructions in full before commencing, then keep referring back to them as you proceed through each Step.

Ready? The design is in your hands!



Needed Equipment

1. 1 x ArmourCore Calibrated Design Sheet.
2. 1 x Pencil
3. 1 x Rubber (optional)
4. 1 x Medium-Tipped black felt pen (e.g. Sharpie)
5. 1 x Digital camera or smart phone with camera function.
6. Blu-Tack or similar prop (as required) - to hold tricky items in place.
7. Correction Fluid/Tape (e.g. 'Liquid Paper') (as required)
8. Ruler/Straight Edge (optional) – makes it easier to draw straight lines.
9. A steady hand and a good eye!

Instructions


STEP 1: Flatten-out your ArmourCore Calibrated Design Sheet on a flat surface.

(Note: Make it easy for yourself and don't place any items on your Sheet yet.)



STEP 7: Now, in the centre of each Outline, use your felt-tip pen to write the depth you want each Outline's cut-out to be. If an Outline is too thin to write a depth within the Outline, you can write the depth beside the Outline and draw an arrow pointing from the depth to the Outline.

You can choose depths in 5mm increments (e.g. 5mm, 10mm, 15mm etc.) up to a maximum depth of 40mm. However, if you would like a cut-out to cut completely through your Custom Tech Insert, please write "Thru" in the centre of the relevant Outline.

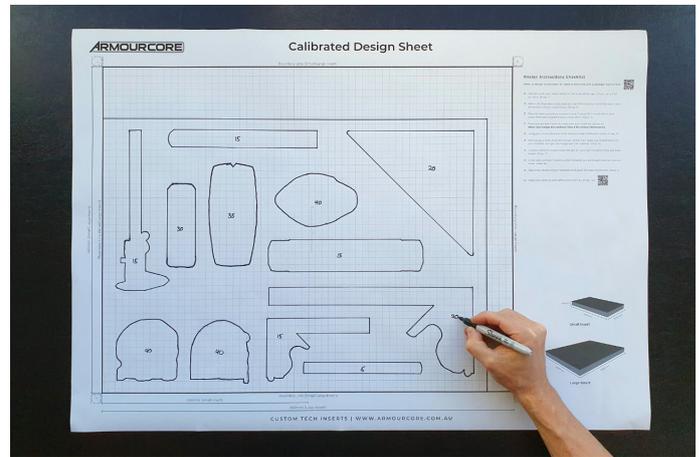

STEP 8: Once again, stand over your Layout, with your camera in your hands and align the Design Sheet's Boundary Lines so that they are visible in your camera's view-finder and the Boundary Lines are square with all four edges of your camera's view-finder.

Take a few photos of your Layout and select the best two photos.

Now, ask yourself, does the Layout in these photos look exactly how I want it to look in my ArmourCore Custom Tech Insert? Are the Outlines aligned and straight, and is the photo squared with the Boundary Lines?

If the answer is no to any of these points, delete the photos and make any adjustments you want to your Template. Now take 2 more photos, then ask yourself the same questions.

If you are now happy with the two photos, these two photos are your "Template Photos". Otherwise repeat until you are happy that the two photos look exactly how you want them to look.

(Note: Photos must be in jpeg, png or tiff format, and be at least 2 Megapixels (1600 x 1200) in size.)



STEP 09: Once you are happy that the items, and the way they are laid out in the photos look exactly how you want them to look in your ArmourCore Custom Tech Insert, you are ready to place your order at ArmourCore.com.au.

(Note: You will be asked to attached the Reference photo and the two Template photos to your order on the Checkout page.)

